


Disaster Master

Disaster master is a simple concept that provides a degree of redundancy without the cost of automatic failover systems. The Disaster Master software makes automatic database copies from the online server to the specified "Disaster Master" computer at a selectable periodic rate. The data rate is variable depending on the speed of the network connection between the two computers. If required, the Disaster Master is manually rebooted in the "Master Mode". The copy of the database, including all of the latest point information is used to continue scanning. The configuration may use communication servers as shown below, or the Comm lines may be physically connected directly to the Disaster Master.

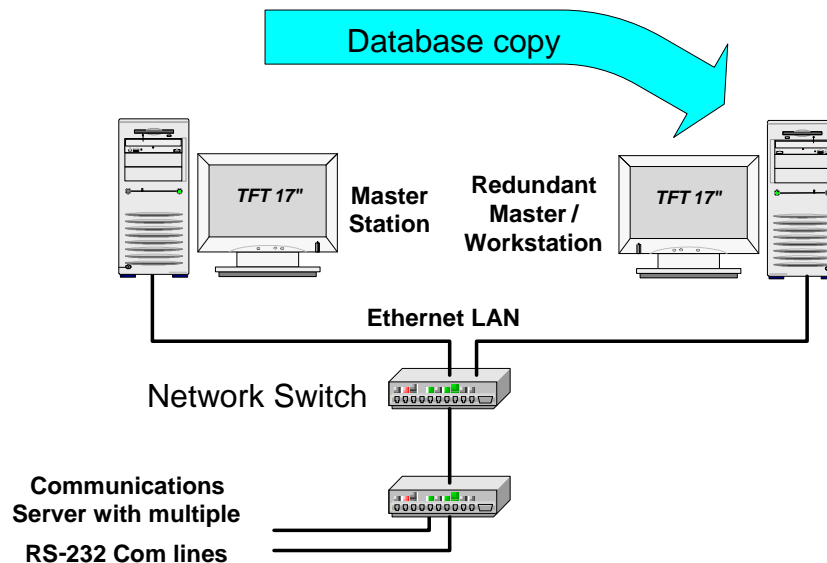

Note: An EOscada Master or workstation license must be installed on the target PC to enable this feature